

USB-ZU-SERIELL-KONVERTER



Kurzanleitung zur Installation Windows 2000/XP DA-70158

- Schritt 1: Legen Sie die Treiber-CD des Produkts in das CD-ROM Laufwerk ein.
- **Schritt 2:** Schließen Sie das Gerät an den Ersatz USB-Anschluss an Ihrem PC an und suchen Sie den neuen Hardware-Assistenten, siehe folgende Grafik:



Schritt 3: Wählen Sie "No, not this time" aus, klicken Sie auf "Next", um fortzufahren.

Found New Hardware Wiz	ard
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy Can Windows connect to Windows Update to search for software? Yes, this time only Yes, now and every time I connect a device No, not this time
	< Back Next > Cancel

Schritt 4: Wählen Sie "Install from a list or specific location (Advanced)", klicken Sie auf "Next", um fortzufahren.

Found New Hardware Wizar	rd
	This wizard helps you install software for: USB <-> Serial cable If your hardware came with an installation CD or floppy disk, insert it now. What do you want the wizard to do? Install the software automatically (Recommended) Install the software automatically (Recommended) Install from a list or specific location (Advanced) Click Next to continue.
	< Back Next > Cancel

Schritt 5: Wählen Sie "Diesen Speicherort in die Suche aufnehmen", klicken Sie auf "Suche" und wählen Sie den entsprechenden OS-Treiben auf der CD aus. Klicken Sie auf "Next", um fortzufahren.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
E:\USB 2.0 TO 2x RS232\win2000_xp_x86_x64 V Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Schritt 6: Automatische Suche nach dem entsprechenden Treiber auf der CD.

Found New Hardware Wizard	
Please wait while the wizard searcl	hes
usb serial converter	<u>S</u>
	Kext > Cancel

Schritt 7: Der Assistent beginnt mit der Installation und kopiert die Datei auf Ihr System.

Found New Hardware Wizard			
Please wait while the wizard installs the	software		
USB Serial Converter A			
FTLang.dll To C:\WINDOWS\system32	ß		
	< Back	Next >	Cancel

Schritt 8: Klicken Sie auf "Finish", um den Assistenten zu schließen.

Found New Hardware Wize	ard
	Completing the Found New Hardware Wizard The wizard has finished installing the software for: USB Serial Converter A
	< Back Finish Cancel

Schritt 9: Suchen Sie den neuen COM-Anschluss.



Schritt 10: Wählen Sie "No, not this time" aus, klicken Sie auf "Next", um fortzufahren.

Found New Hardware Wiz	ard
	Welcome to the Found New Hardware Wizard Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy
	Can Windows connect to Windows Update to search for software? Yes, this time only Yes, now and every time I connect a device No, not this time Click Next to continue.
	< Back Next > Cancel

Schritt 11: Wählen Sie "Install from a list or specific location (Advanced)", klicken Sie auf "Next", um fortzufahren.



Schritt 12: Wählen Sie "Include this location in the search", klicken Sie auf "Browse" und wählen Sie den entsprechenden OS-Treiben auf der CD aus. Klicken Sie auf "Next", um fortzufahren.

Found New Hardware Wizard
Please choose your search and installation options.
 Search for the best driver in these locations.
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
Search removable media (floppy, CD-ROM)
Include this location in the search:
E:\USB 2.0 TO 2x RS232\win2000_xp_x86_x64 V Browse
O Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< Back Next > Cancel

Schritt 13: Der Assistent beginnt mit der Installation und kopiert die Dateien auf Ihr System.

Found New H	lardware Wizard			
Please wa	it while the wizard in:	stalls the software	B	
2	USB Serial Port			
	ftcserco.dll	0	Þ	
	To C:\WINDOWS'	\system32		
		< Ba	ck Next >	Cancel

Schritt 14: Die Installation ist beendet, klicken Sie auf "Finish", um den Assistenten zu schließen.



Schritt 15: Ihre neue Hardware ist installiert und betriebsbereit.



Schritt 16: Wenn Sie diese sehen möchten, rechtsklicken Sie auf "My computer", klicken Sie dann auf "Properties".



Schritt 17: Wählen Sie den "Device Manager" aus der "Hardware" der Schnittstelle "System properties" aus, klicken Sie darauf, Sie können die Hardwaregeräte sehen, die auf Ihrem Computer installiert sind; siehe folgende Grafik:

System	Restore	Automatic	Updates	Remote
General	Computer I	Name	Hardware	Advanced
D				
Device N	lanager	225 224	01 10 1035	10.000-00
3	The Device Manaj	ger lists all the	e hardware devid	ces installed
2	properties of any d	evice.	ice Manager to t	change the
		1	Daviast	
		(Device N	ianager
Drivers				
D. H. L. C. L.				
	Driving Signing lets	u u u maka e	use that installed	drivere ere
	Driving Signing lets compatible with Wi	s you make s indows. Wind	ure that installed dows Update let:	drivers are s you set up
	Driving Signing lets compatible with Wi how Windows con	s you make s indows. Wind nects to Win	ure that installed dows Update let: dows Update fo	drivers are s you set up r drivers.
	Driving Signing lets compatible with Wi how Windows con	s you make s indows. Wind nects to Wind	ure that installed dows Update lets dows Update fo	drivers are s you set up r drivers.
	Driving Signing lets compatible with Wi how Windows con Driver Signi	s you make s indows. Wind nects to Win	ure that installed dows Update let: dows Update fo Windows	drivers are s you set up r drivers. Update
	Driving Signing lets compatible with Wi how Windows con Driver Signi	s you make s indows. Wind nects to Win	ure that installed lows Update let: dows Update fo Windows	drivers are s you set up r drivers. Update
Hardware	Driving Signing lets compatible with Wi how Windows con Driver Signi	s you make s indows. Wind nects to Win ing	ure that installed dows Update leta dows Update fo Windows	drivers are s you set up r drivers. Update
Hardware	Driving Signing lets compatible with Wi how Windows con Driver Signi Profiles Hardware profiles p different bardware	s you make s indows. Wine nects to Win ing	ure that installed dows Update let: dows Update fo Windows y for you to set u	drivers are s you set up r drivers. Update p and store
Hardware	Driving Signing lets compatible with Wi how Windows con Driver Signi Profiles Hardware profiles p different hardware	s you make s indows. Wind nects to Win ing ing provide a way configuration	ure that installed dows Update let: dows Update fo Windows v for you to set u s.	drivers are s you set up r drivers. Update p and store
Hardward	Driving Signing lets compatible with Wi how Windows con Driver Signi Profiles Hardware profiles p different hardware	s you make s indows. Wind nects to Win ing orovide a way configuration	ure that installed dows Update let: dows Update fo Windows y for you to set u s.	drivers are s you set up r drivers. Update p and store
Hardware	Driving Signing lets compatible with Wi how Windows con Driver Signi Profiles Hardware profiles p different hardware	s you make s indows. Wind nects to Win ing orovide a way configuration	ure that installed dows Update let: dows Update fo Windows y for you to set u s. Hardware	drivers are s you set up r drivers. Update p and store Profiles
Hardware	Driving Signing lets compatible with Wi how Windows con Driver Signi Profiles Hardware profiles p different hardware	s you make s indows. Wind nects to Win ing orovide a way configuration	ure that installed dows Update let: dows Update fo Windows y for you to set u s. Hardware	drivers are s you set up r drivers. Update p and store Profiles



Schritt 18: Die Installation ist beendet.

Anmerkung:

Wenn Sie nach der Installation den "USB Serial Converter" vom "Device Manager" aus sehen können, aber den "USB Serial Port (COM3/COM4)" nicht sehen können, fahren sie bitte mit den folgenden Schritten fort.



Schritt A: Rechtklicken Sie auf "USB Serial Converter A/ USB Serial Converter B" und klicken Sie dann auf "Properties".



Schritt B Wählen Sie "Load VCP" unter "Erweitert" aus und klicken Sie auf "OK".

USB Serial Converter A Properties	? 🔀	USB Serial Converter B Properties	? 🔀
General Advanced Driver Details Image: Configuration USB Serial Converter A Use these settings to override normal device behaviour. Image: Configuration Use these settings to override normal device behaviour.		General Advanced Driver Details Image: Configuration Use these settings to override normal device behaviour. Image: Use Use Configuration Use these settings to override normal device behaviour.	
OK Cancel H	lelp	OK Cancel	Help

Schritt C: Ziehen Sie den USB 2.0 AUF 2* RS232 von Ihrem Computer. Schließen Sie das Gerät wieder an den alten USB-Anschluss an Ihrem PC an, jetzt ist es in Ordnung; siehe folgende Grafik:



Glückwunsch, Ihre Installation war erfolgreich.

Treiber-Deinstallation:

 Gehen Sie zu "Add or remove program" unter "Control pane", um das "Windows Driver Pakage --- FTDI CDM Driver Package (03/13/2008 2.04.06) Windows Driver Package --- FTDI CDM Driver package (03/13/2008 2.04.06)" zu suchen.

 Alcor Felink Easy Transfer Driver FLEXid& Driver FLEXid& Drivers FLEXid& Drivers Factor Graphics Licensing Fentor Graphics Products FOC Visual Studio 7 Runtime Fierosoft VinUsb 1.0 MSN Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek Kigh Definition Audio Driver Sentinel System Driver Vindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.06) Vindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.06) 	
 Easy Transfer Driver FLEXid& Driver FLEXid& Driver Facrovision FLEXid Drivers Factor Graphics Licensing Factor Graphics Products For Visual Studio T Euntine Filerosoft VinUsb 1.0 FISE Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Vindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.05) Vindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.05) 	💋 Alcor FeLink
FLEXid& Driver FLEXid Drivers Flexid Drivers Flexid Drivers Flexid Drivers Flexid Driver Statistic Fractions Flexid Driver Statistic Fractions Flexid Driver Statistic Fractions Flexid Driver Statistic Fraction Statistics Flexid Driver Statistic Fraction Statistics Flexid Driver Statistics Driver Package (D3/13/2008 2.04.06) Flexid Driver Package - FIDI CDN Driver Package (D3/13/2008 2.04.06)	Easy Transfer Driver
Imacrovision FLEXid Drivers Imator Graphics Licensing Imator Graphics Products Imato	1 FLEXide Driver
 # Mentor Graphics Licensing # Mentor Graphics Products # MGC Visual Studio T Euntine # Microsoft VinUsb 1.0 # MSN Messenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek Kigh Definition Audio Driver # Sentinel System Driver ¥ Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) ¥ Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) 	1 Macrovision FLEXid Drivers
<pre>//* Henter Graphics Products //* Henter Graphics Products /** Hierosoft VinUsb 1.0 /** HSN Messenger 6.1 /************************************</pre>	📳 Mentor Graphics Licensing
Image: State of S	🔐 Mentor Graphics Products
Image: Sentirel System Driver Image: Sentirel System Driver </th <th>ở MGC Visual Studio 7 Runtine</th>	ở MGC Visual Studio 7 Runtine
 MSN Nessenger 6.1 OrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.05) Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.05) 	ở Microsoft WinUsb 1.0
 GrCAD 9.0 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) 	🐝 MSN Messenger 6.1
 Realtek AC'97 Audio Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.06) Yindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.06) 	📴 OrCAD 9.0
 Realtek High Definition Audio Driver Sentinel System Driver Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) 	😹 Realtak AC'97 Audio
Sentinel System Driver Vindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06) Vindows Driver Package - FIDI CDN Driver Package (03/13/2008 2.04.06)	😹 Realtak High Definition Audio Driver
* Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06) * Vindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06)	😰 Sentinel System Driver
💐 Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.05)	💐 Yindows Driver Package - FIDI CDM Driver Package (03/13/2008 2.04.06)
	💐 Vindows Driver Package - FIDI CDM Driver Package (D3/13/2008 2.04.05)

- 2. Wählen Sie es einfach aus und klicken Sie auf "Remove", um das Treiberprogramm zu löschen.
- 3. Öffnen Sie die Treiber dieses Produktes, siehe bitte in der unteren Grafik



4. Doppelklicken Sie auf die "FTClen.exe", die folgende Benutzeroberfläche wird angezeigt.

4)* FTDI Clean Utility V1.0		FTDI Chip	- *
VID (Hex) FTDI	•	-	Clean Sustem
PID (Hex)			Exit
Status: Ready			

5. Klicken Sie auf "Clean system", die folgende Benutzeroberfläche erscheint:

Information	FTDI Clean Utility V1.0	_ ×
	FTDI •	Clean System
	PID (Hex)	Exit
	^{Windows} ≫ Status: Ready	

6. Trennen Sie den USB 2.0 auf das 2* rs232 Gerät vom PC, klicken Sie auf "OK" die folgende Benutzerorberfläche wird abgezeigt und klicken Sie dann auf "Yes"

-	FTI FTDI Clean Litity VI.0	- ×
Confirm	× • • • • • • • • • • • • • • • • • • •	
2	You are about to uninstall all FTDI drivers for YID 0x0403 and all PIDs. Do you want to continue?	
	No No	
	FTDI 🔹	Clean System
	PID (Hex)	Exit
	Windows XP Status: Ready	

7. Klicken Sie bitte auf "No", um den Treiber zu deinstallieren.

Un FT	FTDI Clean Utility VI.0	- ×
Confirm	you want to cancel driver uninstallation?	
	PID (Hex) WindowsXP Status: Beady	Ent

8. Wenn die Deinstallation beenden ist, klicken Sie bitte auf "Exit", um die Deinstallationsanwendung zu beenden.

🌴 FTDI Clean Utility ¥1.0	_ ×
FTDI Chip	
VID (Hex)	Gran Sveten
PID (Llex)	Exit
Windows XP Status: System clean completed	