

**User's Manual** 

### **Safety Instructions**

Always read the safety instructions carefully

- **● (i)** Keep this equipment away from humidity
- ⑤ If any of the following situation arises, get the equipment checked by a service technician:
  - o The equipment has been exposed to moisture
  - o The equipment has been dropped and damaged
  - o The equipment has obvious sign of breakage
  - The equipment has not working well or you cannot get it work according to this user's manual.

### Contents

- A. INTRODUCTION
- **B. SYSTEM REQUIRMENTS**
- C. HARDWARE APPEARANCE AND CONNECTION
- D. SOFTWARE INSTALLATION
- E. OPERATIONAL NOTES ABOUT THE PORTS ON THE DOCKING STATION

### A. INTRODUCTION

This USB 2.0 Docking Station (DC DOCK5 / DC DOCK6) is a unique expansion unit specially designed to accompany notebook or desktop PC which has extra connectivity demands. With only one USB port required form a notebook/desktop PC, not only USB but also conventional SIO, LAN, PS/2, e SATA, Smart Card reader ,Audio, USB 2.0 HUB and 53 in 1 Card reader peripheral devices can be accessed freely.

DC DOCK5 / DC DOCK6 allows you to add multiple high performance USB 2.0 peripheral devices to your PC. Moreover, this product is fully backwards compatible with the USB Revision 1.1 products, which means your previous USB 1.1 devices can continue to function as well.

### **Features**

- ①# Two or Five USB 2.0 downstream facing ports (Type A receptacle)
- ⑤ ₩ One PS/2 keyboard port
- ⑤¥ One PS/2 mouse port
- ⑤ ₩ One e SATA port
- ③署 One serial port (DB9-pin male)
- ⑤ ₩ One 10/100Base Ethernet LAN port (RJ-45)
- <sup>⑤</sup>

  # One 53in one Card reader

.

# **B. SYSTEM REQUIRMENTS**

### SUPPORTED O.S.:

Function O.S.	Docking Station	
Windows® 98se	Vendor Support*2	
Windows® ME	Vendor Support*2	
Windows® 2000	Vendor Support	
Windows® XP	Vendor Support	
Windows® Vista	Vendor Support	

<sup>\*1.</sup> The USB-PS/2 is a human interface device (HID) with the driver provided from the OS of Microsoft. Also the hub driver is from the OS. The rest peripherals 'drivers are provided within the accompanied CD-ROM.

## **Specifications**

Model	DC DOCK6		DC DOCK5	
RS-232	Yes		Yes	
Memory Card Reader	53 in 1			
Smart Card Reader				
USB 2.0 HUB	4 Port		2 Port	
10/100M LAN	Yes		Yes	
Audio (2 Channel)	Yes			
E-SATA	Yes		Yes	
PS2(Keyboard Mouse)	YAC		Yes	

Environments	Operating temperature: 0°C~40°C	
	Storage temperature: -10°C~80~°C Humidity:90%RH(No condensing)	

<sup>\*2.</sup>USB Audio port cannot function under Windows® 98se/ME due to the incompatibility issue of driver.

Emission	CE FCC
POWER	AC Input 100 V~240V
	DC Output 5V, 2.0A

### C. HARDWARE APPEARANCE and CONNECTION

#### LED Status Indicators

Please refer to Figures 1 and 2 for the LED functional indicators and layout of ports of DC DOCK5 / DC DOCK6 docking station.

Model	LED	Color	Descriptions
DC DOCK5 /	1	Red	Turned on when the docking station is powered.
DC DOCK6	2	Green	Indicate the card reader working state

- Substitute State Sta
- ⊕ H Plug the flat end (Type A receptacle) of the USB cable into a free USB port on the NB/PC.
- ⊕ H Plug the square end (Type B receptacle) of the USB cable into the USB upstream connector located on the side of docking station.
- At this point, Windows® OS will automatically find the docking station and start installing its drivers (called enumeration). Windows® OS will prompt you to act along the driver installation process. See the next section for details on how to install the drivers and AP

### D. SOFTWARE INSTALLATION

Please make sure that NB/PC is powered on properly and the docking station is also powered and connected to the NB/PC's USB port with a USB2.0 cable (included in the package). The NB/PC will start the enumeration process automatically. If this is the first time that a docking station connected to the NB/PC, the OS will proceed to install all the required drivers. OS will prompt user to take some action if needed. The driver installation process is only needed for the very first time of connecting docking station and the NB/PC and is briefly introduced in this section.


Please note that only the installation processes of Windows® XP are demonstrated here. For Windows® 98se and Windows® ME and Windows® 2000, the processes are similar, just follow the prompts on the screen can finish the installation without a problem since the OS will take care everything automatically.

Please make sure the driver CD-ROM is placed in the CD-ROM drive before proceed.

### Software Installation in Windows®®XP

For Windows® XP, there are two drivers which need to install from the driver CD-ROM: (1). USB-LAN, (2) USB-serial port, The drivers of rest devices are provided by Windows® XP and will be installed without user's care.. Along the installation.

**Figure 18.** Select **Install the software automatically**, and click Next > to start the driver installation. Note that the name (**Au9520\_v1.2.4.16.exe**) of the device may vary due to the update of newest driver. It will not affect the function and installation of the device.

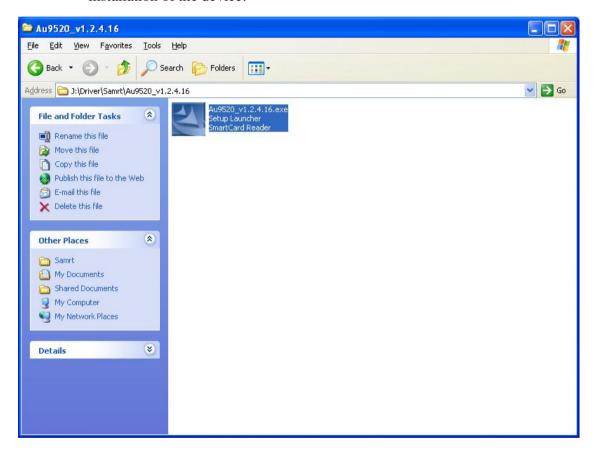



3. Click Finish to end the wizard for driver of USB Smart Card reader.



USB-Serial Driver installation, computer systems based on tips completed.


.



Choose" install from a list or specific location (Advanced)" Click Next to continue




Click "Browse" Choose the driver location.

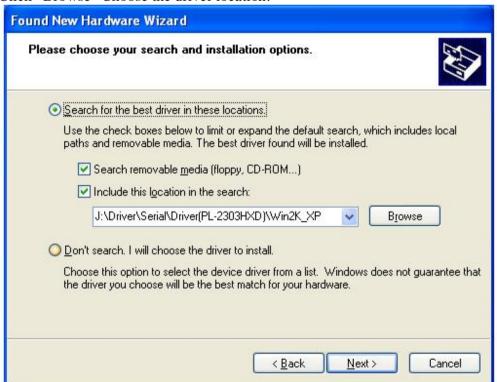




### Click next

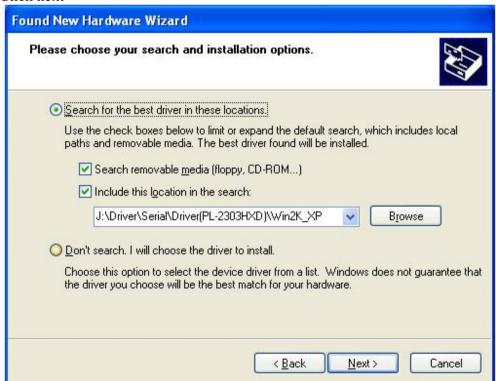

Click "Finish" to close the wizard

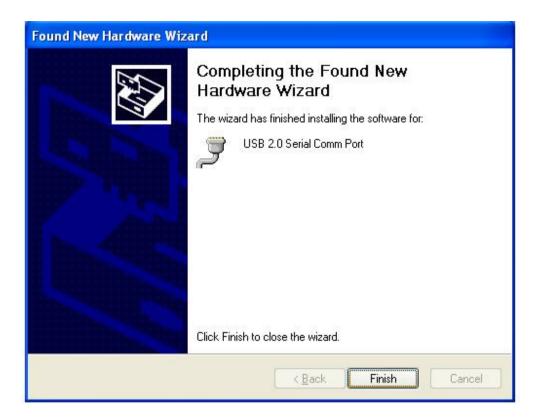


USB-LAN Driver installation, computer systems based on tips completed.



Choose "Install from a list or specific location (Advanced)" Click next to continue




Click "Browse" Choose the driver location.

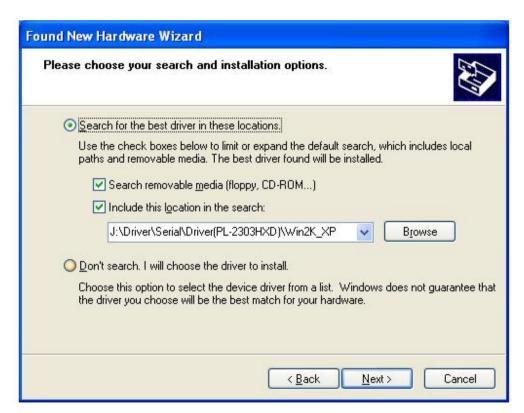




Click next to continue

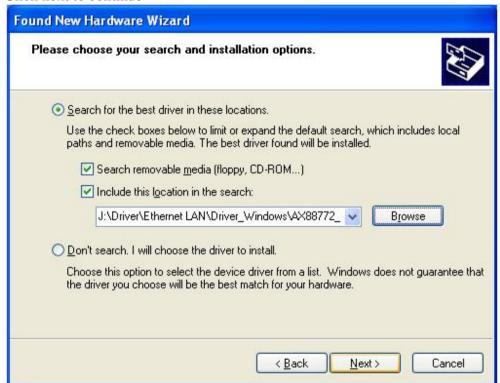

Click Finish to close the wizard



Upon the completion of the installation of these three procedures, restart the computer in the "Device Manager" will see the following devices.

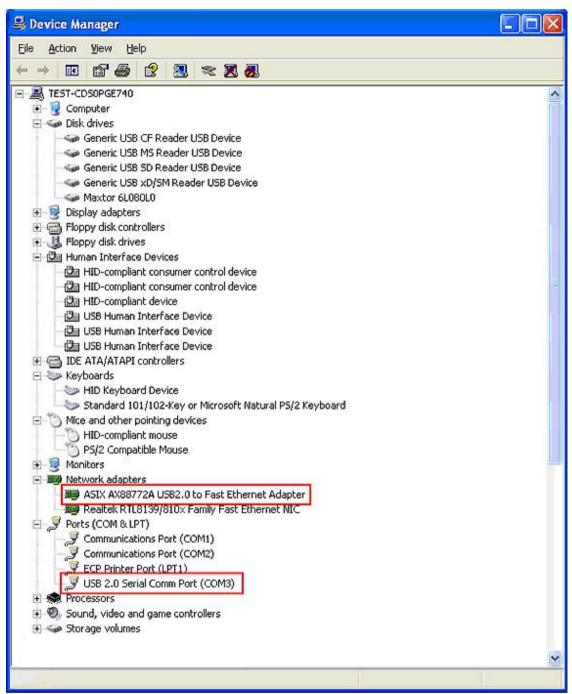

The end. Thank you for using the product.