

WIRELESS 150N USB 2.0 ADAPTER



Quick Installation Guide

Package Contents	Page 1
Network Card Installation	Page 2
Connect to Wireless Access Point	Page 5

Package Contents

Before you starting to use this wireless network card, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

USB Wireless Network Card (1 pcs)	1
Driver/Utility/Quick Guide/User Manual CD-ROM (1 pcs)	2



Network Card Installation

Please follow the following instructions to install your new USB wireless network card.



	Welcome to the Found New Hardware Wizard
	Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission). Read our privacy policy
	Can Windows connect to Windows Update to search for software?
	O Yes, this time only
	Yes, now and every time I connect a device
	◯ No, not this <u>time</u>
	Llick Next to continue.
	(Back Next > Lance
TTV 11 100 111	
ALTEK 11n USB Wirel	ess LAN Software - InstallShield Wizard
ALTEK 11n USB Wirel Choose Setup Language Select the language for the	e installation from the choices below.
ALTEK 11n USB Wirel Choose Setup Language Select the language for the	e installation from the choices below.
ALTEK 11n USB Wirel Choose Setup Language Select the language for the Bulgarian Catalan Chinese (Simplified) Chinese (Traditional) Croatian Czech Danish Dutch	ess LAN Software - InstallShield Wizard
ALTEK 11n USB Wirel Choose Setup Language Select the language for the Bulgarian Catalan Chinese (Simplified) Chinese (Traditional) Croatian Czech Danish Dutch English Finnish	e installation from the choices below.
ALTEK 11n USB Wirel Choose Setup Language Select the language for the Bulgarian Catalan Chinese (Simplified) Chinese (Traditional) Croatian Czech Danish Dutch English Finnish French (Canadian) French (Canadian)	e installation from the choices below.
ALTEK 11n USB Wirel Choose Setup Language Select the language for the Bulgarian Catalan Chinese (Simplified) Chinese (Simplified) Chinese (Simplified) Chinese (Simplified) Chinese (Simplified) Datch English Finnish French (Canadian) French (Canadian) French (Standard) German	ess LAN Software - InstallShield Wizard

1. Insert the USB wireless network card into an empty USB 2.0 port of your computer when computer is switched on.

Never use force to insert the card, if you feel it's stuck, flip the card over and try again.

2. The following message will appear on your computer, click 'Cancel'.

3. Insert device driver CDROM into the CD/DVD ROM drive of your computer. Select "Driver/Utility Installation" to install the software program.

REALTEK 11n USB Wireless LAN Software - InstallShield Wizard 💦 🔲 🔀
Choose Setup Language Select the language for the installation from the choices below.
Basque Bulgarian Catalan Chinese (Simplified) Chinese (Traditional) Croatian Czech Danish Dutch English Finnish French (Canadian) French (Standard) German Greek InstallShield
< Back Next > Cancel
REALTEK 11n USB Wireless LAN Driver and Utility





4. Please select the language you wish to use, then click 'Next'.

5. Click 'Next' to continue.

6. Click 'Install' to start installation.Installation procedure needs few minutes to complete, please be patient.

REALTEK 11n USB Wireless LAN Driver and Utility	
	InstallShield Wizard Complete The InstallShield Wizard has successfully installed REALTEK 11n USB Wireless LAN Driver and Utility. Before you can use the program, you must restart your computer. • Yes, I want to restart my computer now. • No, I will restart my computer later. Remove any disks from their drives, and then click Finish to complete setup.
	K Back Finish Cancel

7. Click 'Finish' to reboot your computer to complete installation procedure. If you don't want to reboot computer now, select 'No, I'll restart my computer later' option and click 'Finish'. Please note you have to reboot your computer before you can use your new USB wireless network card.

Connect to Wireless Access Point

Using Configuration Utility to Connect to Wireless Access Point:



be shown in the desktop of your computer automatically. You will also see an icon at the lower-right corner of your windows system. You can click the icon by right mouse key, and select the configuration utility you want to use.

1. After installation is complete,

wireless configuration utility will

2. Wireless utility will appear. Click 'Available Network' tab to search for wireless access points nearby.

REALTEK 11n USB W	ireless LAN Utility 📃 🗖 🔀
Refresh(R) Mode(M) Abou	ut(A)
B S MyComputer	General Profile Available Network Status Statistics Wi-Fi Protect Setup
Realter R11819	Status: Not Associated
	Speed: N/A
	Type: N/A
	Encryption: N/A
	SSID:
	Signal Strength:
	Link Quality:
	Network Address:
	MAC Address:
	IP Address: 0.0.0.0
	Subnet Mask: 0.0.0.0
	Gateway:
	ReNew IP
🗹 Show Tray Icon	Disable Adapter Close
🔲 Radio Off	Windows Zero Config

🙈 REALTEK 11n USB W	ireless LAN Utility	
Refresh(R) Mode(M) Abo	rt(A)	
🖃 🚽 MyComputer	General Profile Available Network Status Statistics Wi-Fi Protect Setup	
Realtek RTL8191	Available Network(s)	
	SSID Channel Encryption Network Authentication	Signal 1
	1 ⁹⁾ WLBARN23-00-0A 1 WEP Unknown	8% Ir
	🖓 arnv-ap 1. TKIP WPA Pre-Shared Key	26% Ir
	VXTRAVEL 3 TKIP WPA Pre-Shared Key	100% I
	Xinhai 6 TKIP WPA2 Pre-Shared Key	8% Ir
	10 IKIP/AES WPA Pre-Shared Key/	8% Ir
	A LalaPORT II WEP Oriknown	44% Ir 8% Ir
		0,0 1
	Refresh Add to Profile	1
)
	Note	
	Double click on item to join/create profile.	
<		
🔽 Show Tray Icon	Disable Adapter	Close
🔲 Radio Off	🗌 Windows Zero Config	0.050

Profile Name:	VXTRAVEL	802.1x configure	
Network Name(SSID):	VXTRAVEL	EAP TYPE :	
		GTC	~
		Tunnel : Privision Mode	:
access points are not	-computer(ad hoc) network; wireless : used.		×
Channel:	3 (2422MHz)		
Charlino.	5 (ETEEPILE)	Username :	
-Wireless network secu	rity		
This network requires	a key for the following:	Identity :	
Netw	ork Authentication: WPA-PSK 🛛 👻		
	Data encryption: TKIP	Domain :	
ASCII PASS	PHRASE	Password :	
Key index (advanced)	1 🗸	Certificate :	
Network key:			~
		PAC : Auto Select PAC	
Confirm network key:		•	×

3. Please wait for a while, and all wireless access points which can be reached by this wireless network card will be displayed here.

Please select the access point you want to connect, and then double click on it or click 'Add to Profile'.

If the wireless access point you want to connect does not show here, please click 'Rescan'.

4. If a password (a.k.a. 'Network Key') is required to access the wireless access point, please input it in 'Network key' (and input it again in 'Confirm network key' for confirmation). Click 'OK' when password is properly inputted.

🚜 REALTEK 11n USB W	ireless LAN Utility	
Refresh(R) Mode(M) Abou	ıt(A)	
B S MyComputer	General Profile Available Network Status Statistics Wi-Fi Protect Setup	
Realtek R IL8191		
	Status: Associated	
	Speed: Tx:54 Mbps Rx:54 Mbps	
	lype: Infrastructure	
	Encryption: TKIP	
	SSID: VXTRAVEL	
	Signal Strength: 98%	
	Link Quality:	
	99%	
	Network Address:	
	MAC Address: 00:1F:1F:41:12:5E	
	Subnet Mask: 0.0.0.0	
	Gateway:	
		3
	ReNew IP	
Show Tray Icon	Disable Adapter	Close
Radio Off	Windows Zero Config	

5. The network card will attempt to connect to access point now, this may require few seconds to minutes, please be patient. When the 'Status' become 'Associated' in 'General' tab, your computer is connected to access point you selected. Click 'Close' to close configuration menu.

For advanced settings and other features of this USB wireless network card, please refer to user manual enclosed in supplied CD-ROM.

