DIGITUS®

Quick Installation Guide

WIRELESS 300N AUTO INSTALLATION

USB ADAPTER

Package Contents

Before you starting to use this wireless network card, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:

☐ USB wireless network card (1 pcs) ……..……………………………………… 1
☐ Protection Cap (1 pcs) ………………..…………………………………….. 2
☐ Quick installation guide (1 pcs) ……………….…………………………… 3
☐ User manual / device driver CD-ROM (1 pcs) …………….………………….. 4
☐ USB Cable (1 pcs) …………….……………….…………………………. 5
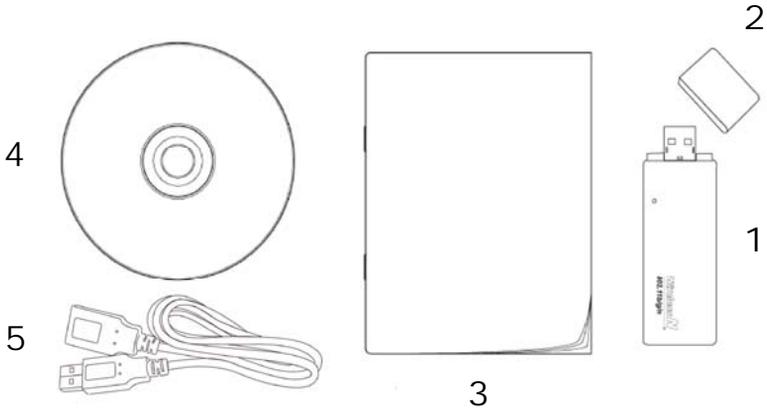
Network Card Installation

Please follow the following instructions to install your new USB wireless network card:
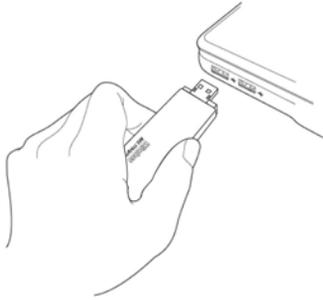
	1. Insert the USB wireless network card into an empty USB 2.0 port of your computer when computer is switched on. Never use force to insert the card, if you feel it's stuck, flip the card over and try again.
	2. Install the adapter into your computer and wait a few minutes for the system starting to install the driver and utility automatically.
	3. The system will finish driver and utility installation automatically.
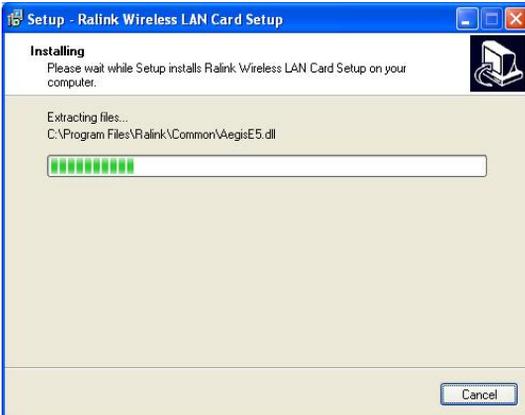
Connect to Wireless Access Point

Using Configuration Utility to Connect to Wireless Access Point
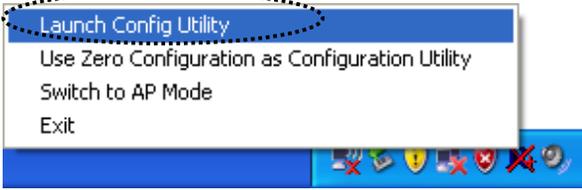
Launch Config Utility Use Zero Configuration as Configuration Utility Switch to AP Mode Exit	1. After installation is complete, wireless configuration utility will be shown in the desktop of your computer automatically. You will also see an icon at the lower-right corner of your windows system. You can click the icon by right mouse key, and select the configuration utility you want to use or switch the network card to AP mode.
Ralink Wireless Utility Profile | Link Status | Site Survey | Statistics | Advanced | QoS | WPS Configuration | About 	SSID	BSSID	Signal	C..	Encrypt...	Authent...	Network T.
@h32046	00-0E-2E-92-F9-...	91%	1	TKIP	WPA-P...	Infrastruct..
FAE	00-0E-2E-44-6B-...	100%	1	None	Unknown	Infrastruct..
	00-50-FC-D7-A1...	55%	11	TKIP	WPA-P...	Infrastruct..
	00-0E-2E-FF-FF-...	34%	11	None	Unknown	Infrastruct..
6554N	00-0E-2E-DF-52...	100%	11	TKIP;A...	WPA-P...	Infrastruct..
ailive	00-0E-2E-43-3C-...	100%	11	TKIP	WPA-P...	Infrastruct..
6315SRg	00-0E-2E-B3-4F-...	100%	11	TKIP	WPA-P...	Infrastruct..
6FGUEST	00-0E-2E-6E-FB...	29%	2	WEP	Unknown	Infrastruct.. | Connected <--> FAE Rescan Connect Add to Profile OK Help	2. Configuration utility will scan for wireless access points and access to any unencrypted wireless access point automatically. If you wish to connect to another access point, select the access point and click 'Connect'. If the wireless access point you want to connect does not show here, please click 'Rescan'.
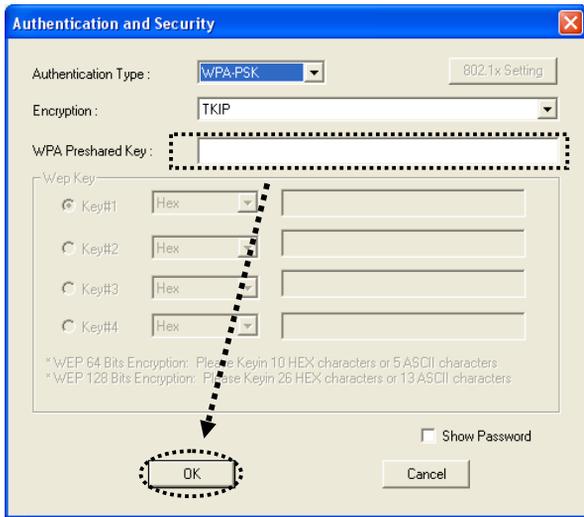
	3. If the wireless access point uses encryption, you have to input WEP key or WPA preshared key. Please ask the owner of the wireless access point you want to connect and input the correct key here, and then click 'OK'. If the value you inputted here is wrong, you will not be able to connect to wireless access point. *Authentication type is selected automatically, please don't change it.*
	4. If the wireless access point is successfully connected, you'll see a ▶ symbol appears in front of the name of wireless device.
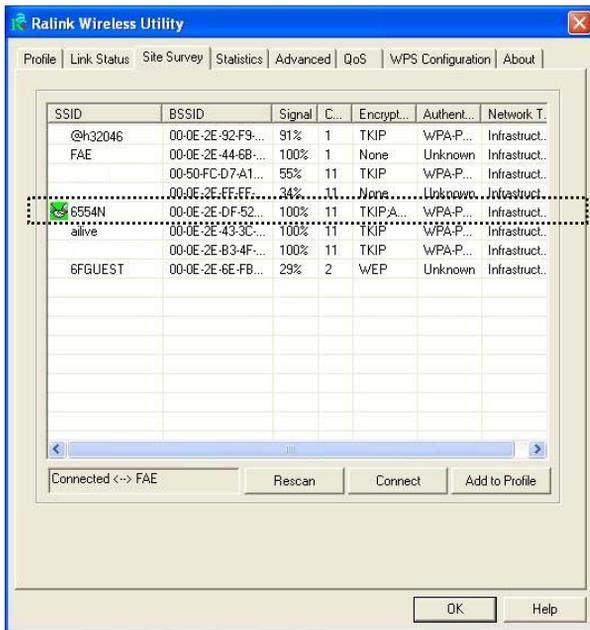
For advanced settings and other features of this USB wireless network card, please refer to user manual enclosed in supplied CD-ROM.

FC CE ①