



# Discover the simple Network Installation with CAT 6a Keystone Jacks from DIGITUS<sup>®</sup>

**1**

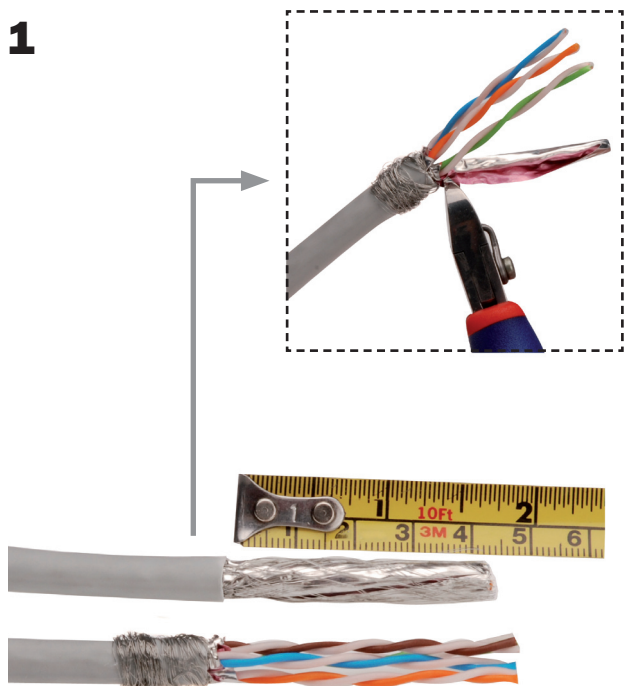

Strip approximately 4cm of the cable jacket.

**2**

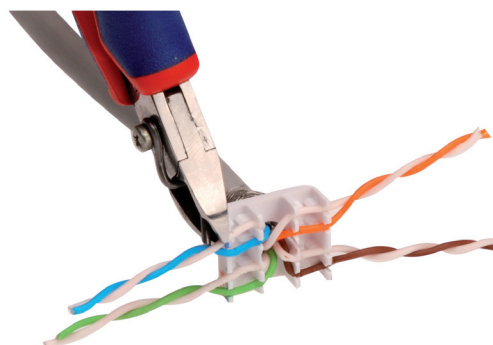

Follow the color code to place the wires into the cap slots. Keep the pairs twisted as possible and cut of the surplus wires.

**Puchdown Sequences:**


T568A

- Pin 5 White / Blue
- Pin 4 Blue
- Pin 1 White / Green
- Pin 2 Green
- Pin 3 White / Orange
- Pin 6 Orange
- Pin 7 White / Brown
- Pin 8 Brown

T568B


- Pin 5 White / Blue
- Pin 4 Blue
- Pin 1 White / Orange
- Pin 2 Orange
- Pin 3 White / Green
- Pin 6 Green
- Pin 7 White / Brown
- Pin 8 Brown

**3**

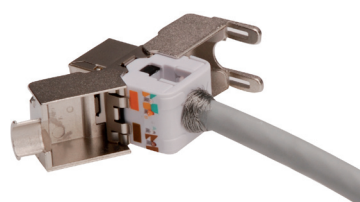


Put the cap into Keystone Jack according to the color code.

**4**

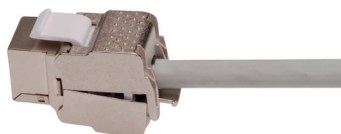

Lock the side caps of the Keystone Jack.

**5**

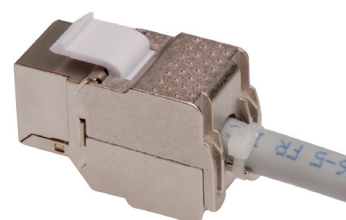

Fix the Keystone Jack with a cable tie.