


- ②Pressing the blue button on the circuit breaker and then closing the breaker;
- ③Connect the power cable, turn on the switch and the appliance resumes work.

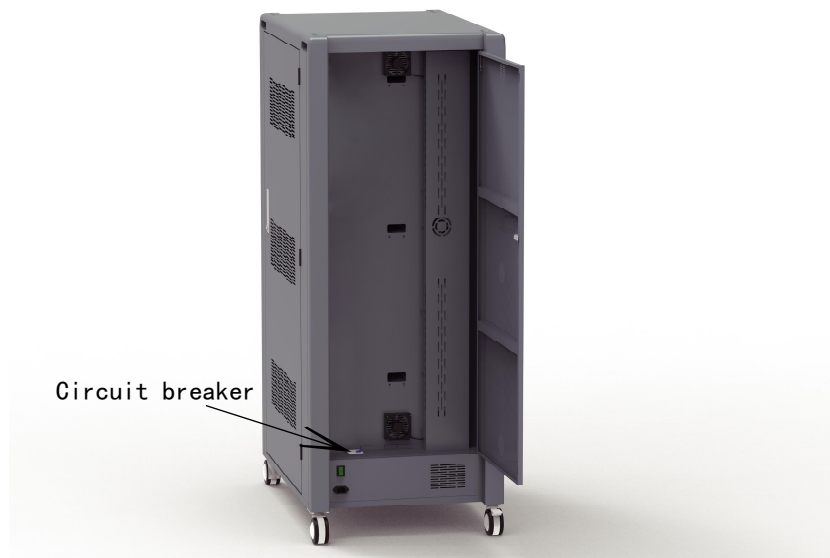

DATA MANIPULATION (Optional)

- ①The charging cart has separate charging and data processing modules for each layer, which need to be operated in separate layers for each data transfer.
- ②Place the VR one by one in the charging slot and connect the USB charging cable, the power cable is connected to the mains and the power switch is turned on.
- ③Connect the USB cable to the USB port on the side of the charging cart.
- ④Open "My Computer" on the master PC and recognise the VR for data transfer.

AFTER SALES SERVICE

The following conditions are not covered by the after-sales service:

- ① Damage caused by improper use, maintenance or storage;
- ② Damage caused by self-modification;
- ③ Damaged after purchase due to dropping and during installation;
- ④ Damage caused by force majeure factors such as earthquakes, fire, lightning strikes, abnormal voltages and secondary disasters.

INSTRUCTION MANUAL



MODEL

LKEC30

LIST OF ACCESSORIES

- AC Power Cord*1
- Charging cable*30
- Key*2
- Instructions*1

SPECIFICATIONS



- Output: 9V 2A

CAUTIONS

Please read this instruction carefully before installation and use, and check whether the electrical socket is grounded. If it is not grounded, there is a risk of leakage. Do not install this machine near the window to avoid corrosion of the body caused by exposure and rain, and keep away from possible damage to ensure rechargeable vehicle service life. Due to the continuous upgrading and transformation of the product appearance, there may be some differences between the physical object and the manual picture, and the user is responsible for the damage caused by improper operation.

- ◇Unauthorized maintenance personnel shall not disassemble the circuit part of the cart;
- ◇Unauthorized maintenance personnel shall not replace the internal electrical appliances of the cart;
- ◇It is strictly forbidden to sprinkle water, oil and other liquid into the cart;
- ◇It is forbidden to climb and stand on the cart;
- ◇It is strictly forbidden to deeply rotate fans and sockets such as fingers and bamboo strip.
- ◇Do not hang on the door to prevent personal injury from the door pulling or the charging cart tipping over.

PRODUCT DESCRIPTION

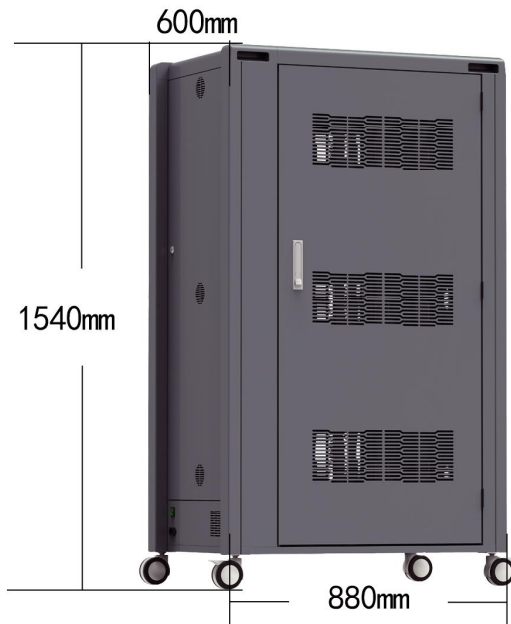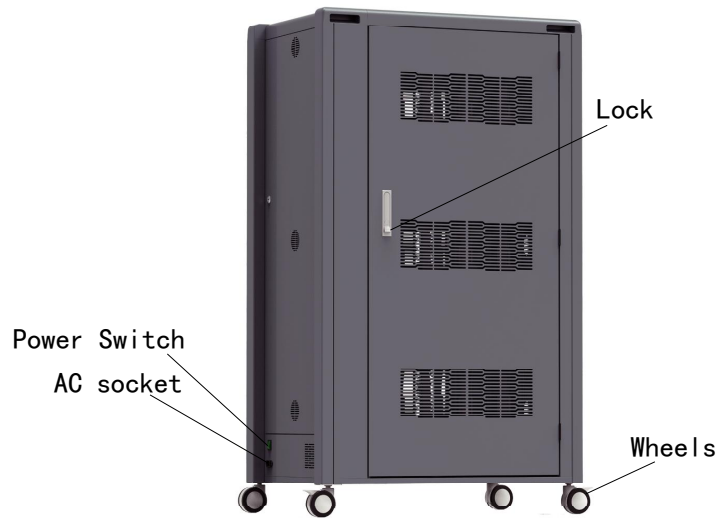

OPERATION STEPS

- ① Please turn off the power switch before operation to ensure that the equipment is not powered on.
- ② Put VR glasses into the storage area one by one, and then insert the charging head into the charging port of VR glasses.
- ③ Close the cabinet door and turn on the power switch, the green light of the switch lights up. The LED indicator inside the charging cabinet displays the charging status. The red light represents charging, and the green light represents full charge or no equipment access.
- ④ After the power is turned on, the UV lamp will automatically power off after 10 minutes of disinfection. After disinfection, you can open the door and take the VR glasses

Note: If the equipment switch is closed, the switch indicator does not light green, and the entire equipment is not powered on. Open the cabinet door, there is an overload protector on the bottom layer, press the blue button on the protector, and then push the knife switch upward, at this time, the equipment is back on power.

STATUS DESCRIPTION

Description of charging status lamp:

- When the power supply is connected, the status indicator is static green.
- Static red light on, the device is in fast charging mode;
- Static red light to static green, charging end;

UV LAMPS

When the charging cart is switched on, the UV lamp will disinfect for ten minutes and then automatically switch off. If the UV lamp needs to be restarted, the charging cart needs to be restarted.

GENERAL EXCEPTION HANDLING

If the charging cart suddenly loses power and the light on the switch goes out, it can be predicted as a trip. Handle as follows: (unplug the power cable before operation)

- ① Open the side door with the key;